 


TECKNET

Wired Gaming Keyboard

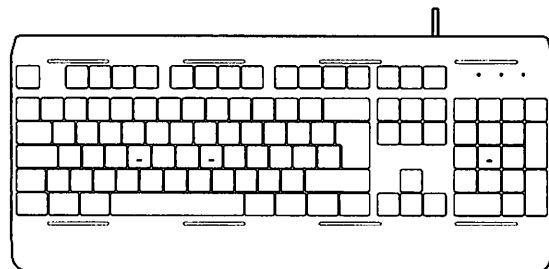

 
Model: TK-KB002

User Manual


EN DE

Thank you for purchasing TECKNET Wired Gaming Keyboard. Please read this User Manual thoroughly before use of the product and retain it for future reference. If you have any problem using this product, please contact us by email at support@ylinksworld.com.

Package Contents



x 1

 

x 1

Specifications

1. Operating Voltage: 5 V
2. Operating Current: ≤140 mA

System Requirement

1. Available USB-A Port (USB 2.0/3.0)
2. Compatible Systems: Windows XP / Vista / 7 / 8 / 8.1 / 10 / 11

How to Use

Connect the keyboard to the USB-A port on your computer. The RGB lighting turns on showing that the keyboard is ready to use.

Keyboard Shortcuts

FN+F1	Player	FN+F2	Volume-
FN+F3	Volume+	FN+F4	Mute/Unmute
FN+F5	Stop	FN+F6	Previous Track
FN+F7	Pause/Play	FN+F8	Next Track
FN+F9	Email	FN+F10	Browser Homepage
FN+F11	Lock/Unlock Keyboard	FN+F12	Calculator
FN+Win	Lock/Unlock Windows Key	FN+W	Switch WASD and Arrow Keys

Switching RGB Lightings

FN + 	Colorful Static Pattern / Colorful Breathing Pattern
FN + 	Colorful Wave Pattern
FN + 	Red/Yellow/Green/Cyan/Blue/Purple/White
FN + 	Seven-color Looping / Seven-color Breathing & Looping
FN + 	Red Light
FN + 	Lightings On/Off

Adjusting Brightness and Breathing Speed

FN + ↑	Increase Brightness
FN + ↓	Decrease Brightness
FN + ←	Decrease Breathing Speed
FN + →	Increase Breathing Speed

IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.



1. RETAIN THESE INSTRUCTIONS - This sheet contains important safety and operating instructions.
2. Before using the product, read all instructions and caution markings on the product, accessories, and device.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Keep the product away from the fire to avoid an explosion.
6. Do not place the product in or near an inflammable, explosive, or hazardous object.
7. Do not operate the product with a damaged cord or plug.
8. Do not operate the product if it has been damaged in any way.
9. Do not disassemble the product. Disassembly may result in a risk of safety hazards.
10. Do not throw or shake the product.
11. Do not place the product in or near water, rain, excess moisture, or extreme heat.

Correct Disposal of This Product



(Waste Electrical& Electronic Equipment)

This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Limited 12-Month Warranty



What this warranty covers.

Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TeckNet product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is.

Unichain warrants the TECKNET product for 12 Months.

What will we do to correct problems?

Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product).

What is not covered by this warranty?

All above warranties are null and void if the TeckNet product is not provided to Unichain for inspection upon Unichain's request at the sole expense of the purchaser, or if Unichain determines that the TeckNet product has been improperly installed, altered in any way, or tampered with. The TeckNet Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system equipment modification or alteration.

How to claim the warranty

Please contact retailers or visit TECKNET website or email support@ylink-world.com for more information. To extend the warranty period, please visit TECKNET website and register your TECKNET products within 90 days of purchase.

Disclaimer

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Shenzhen Unichain Technology Co., Ltd. declares that the product type TK-KB002 is in compliance with Directive 2014/30/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://teckneteu.com/>

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Vielen Dank, dass Sie sich für die verkabelte Gaming-Tastatur von TECKNET entschieden haben. Bitte lesen Sie diese Bedienungsanleitung gründlich durch, bevor Sie das Produkt verwenden und bewahren Sie sie zur zukünftigen Referenz auf. Wenn Sie Probleme mit diesem Produkt haben, kontaktieren Sie uns bitte per E-Mail unter support@ylink-world.com.

Lieferumfang



x 1



x 1

Spezifikationen

- 1. Betriebsspannung: 5 V
- 2. Betriebsstrom: ≤140 mA

Systemanforderungen

- 1. Verfügbare USB-A-Anschluss (USB 2.0/3.0)
- 2. Kompatible Systeme: Windows XP / Vista / 7 / 8 / 8.1 / 10 / 11

Verwendung

Verbinden Sie die Tastatur mit dem USB-A-Anschluss Ihres Computers. Die RGB-Beleuchtung schaltet sich ein und zeigt an, dass die Tastatur einsatzbereit ist.

Tastenkombinationen

FN+F1	Spieler	FN+F2	Lautstärke Verringern
FN+F3	Lautstärke Erhöhen	FN+F4	Stummschalten/Stummschaltung Aufheben
FN+F5	Stopp	FN+F6	Vorheriger Titel
FN+F7	Pause/Play	FN+F8	Nächster Titel
FN+F9	E-Mail	FN+F10	Browser-Startseite
FN+F11	Tastatur Sperren/Entsperren	FN+F12	Taschenrechner
FN+Win	Windows-Taste Sperren/Entsperren	FN+W	WASD- und Pfeiltasten Wechseln

Umschalten der RGB-Beleuchtung

FN + Einfg M1	Farbenfrohes statisches Muster / Farbenfrohes Atmungsmuster
FN + Entf M2	Farbenfrohes Wellenmuster
FN + Pos1 M3	Rot/Gelb/Grün/Cyan/Blau/Lila/Weiß
FN + Ende M4	Siebenfarbiger Zyklus / Siebenfarbiges Atmen & Zyklen
FN + Bild↑ G1	Rotes Licht
FN + Bild↓	Beleuchtung Ein/Aus

Anpassung der Helligkeit und Atmungsgeschwindigkeit

FN + ↑	Helligkeit Erhöhen
FN + ↓	Helligkeit Verringern
FN + ←	Atmungsgeschwindigkeit Verringern
FN + →	Atmungsgeschwindigkeit Erhöhen

WICHTIGE SICHERHEITSHINWEISE - BEACHTEN SIE DIESE ANWEISUNGEN SORGFÄLTIG.



1. HEBEN DIESE ANWEISUNGEN AUF - Dieses Blatt enthält wichtige Sicherheits- und Betriebsanweisungen.



2. Lesen Sie vor der Verwendung des Produkts alle Anweisungen und Warnhinweise auf dem Produkt, Zubehör und den Geräten, die unser Produkt verwenden.



3. Dieses Gerät ist nicht für die Verwendung durch Personen (einschließlich Kinder) mit eingeschränkten körperlichen, sensorischen oder geistigen Fähigkeiten oder mangelnder Erfahrung und Wissen vorgesehen, es sei denn, sie wurden von einer für sie verantwortlichen Person beaufsichtigt oder in die Verwendung des Geräts eingewiesen Sicherheit.



4. Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen.



5. Halten Sie das Produkt von Feuer und Explosionen fern.

6. Stellen Sie das Produkt nicht in oder in der Nähe von brennbaren, explosiven oder gefährlichen Gegenständen auf.



7. Betreiben Sie das Produkt nicht mit einem beschädigten Kabel oder Stecker.



 
8. Betreiben Sie das Produkt nicht, wenn es in irgendeiner Weise beschädigt wurde.

9. Zerlegen Sie das Produkt nicht. Die Demontage kann zu Sicherheitsrisiken führen.

10. Werfen oder schütteln Sie das Produkt nicht.

11. Stellen Sie das Produkt nicht in oder in der Nähe von Wasser, Regen, übermäßiger Feuchtigkeit oder extremer Hitze auf.

Lighting On/Off

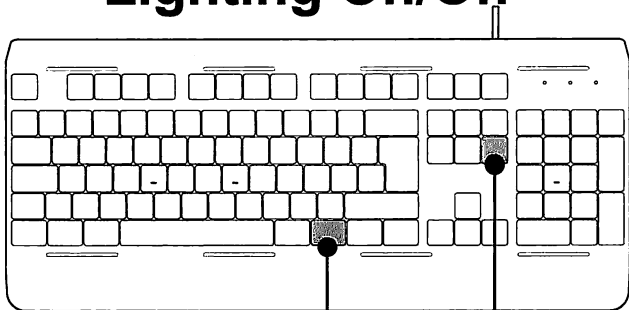

FN

**Lighting Key/
Beleuchtungstaste**

US/UK: FN +



Lightings On/Off

DE:

FN +



Beleuchtung Ein/Aus